




# Black and Decker DustBuster 15.6V Power Button Assembly Replacement

Replacing a faulty power button switch.

Written By: luke Gauvin

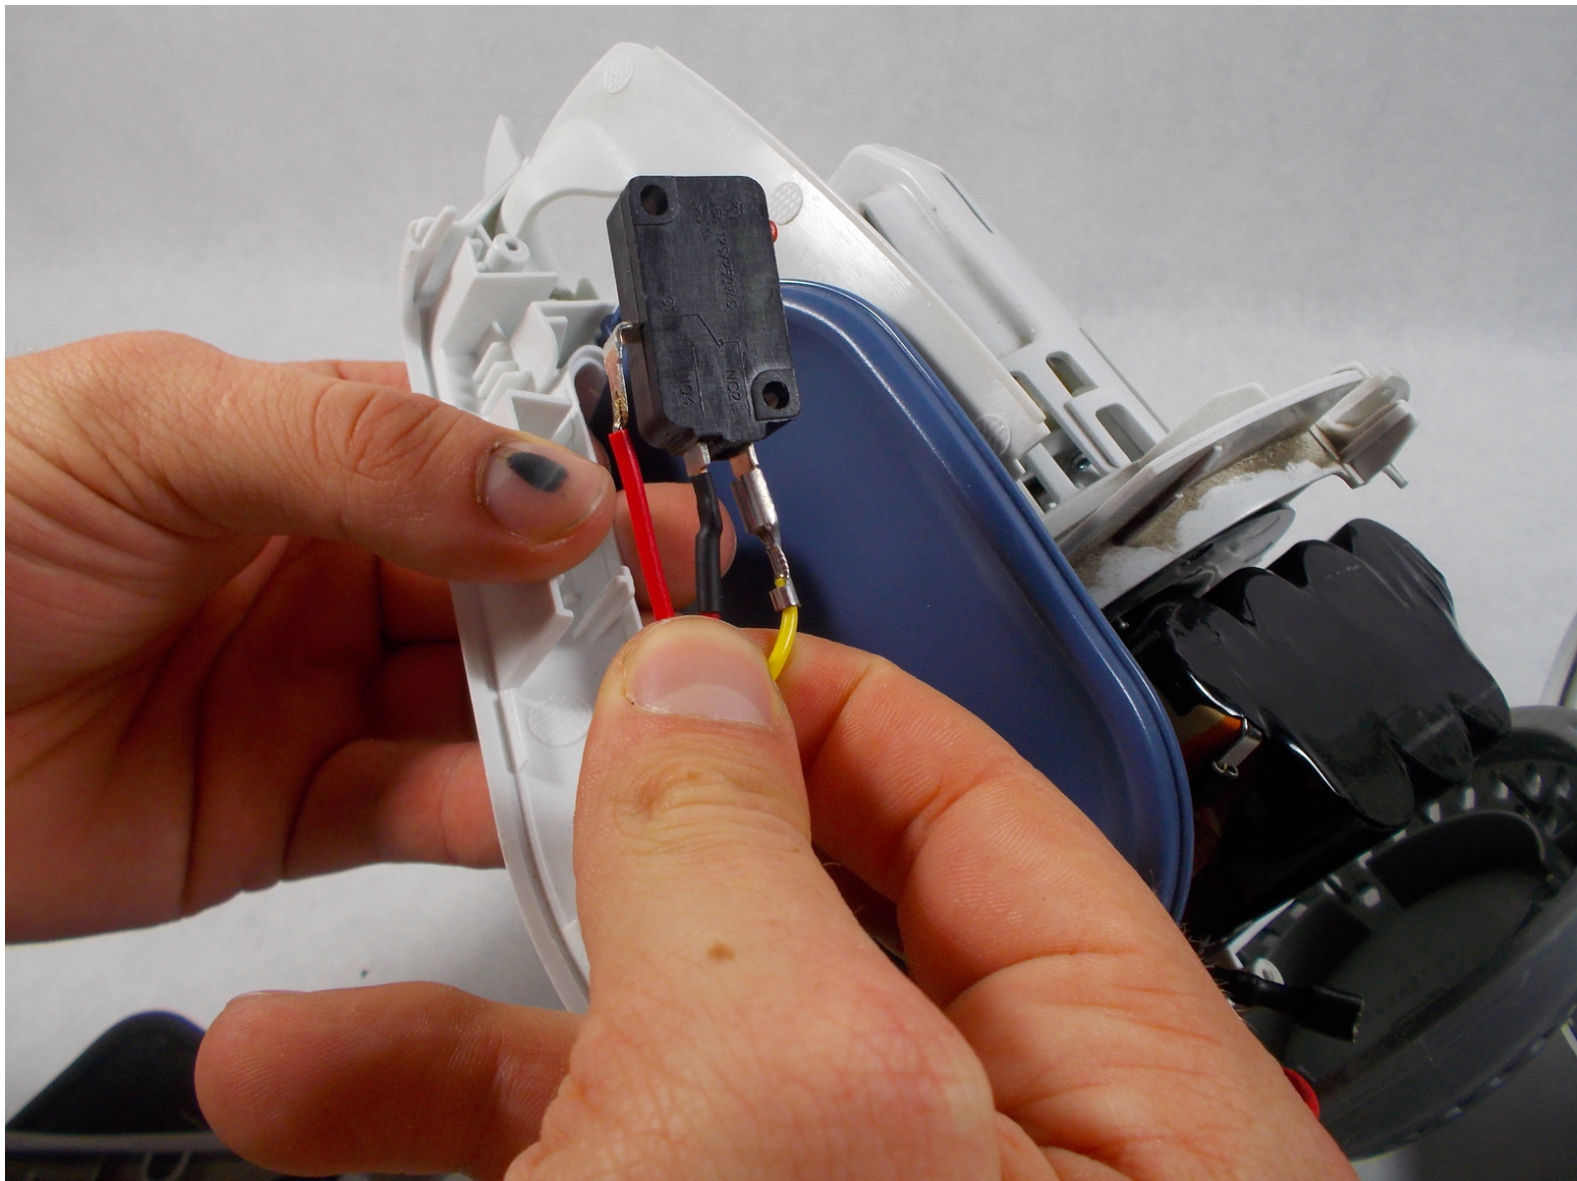

## INTRODUCTION

This guide shows how to disassemble your vacuum enough to remove and replace a faulty power switch. It is a fairly simple process requiring only a long neck Phillips head screwdriver.



### TOOLS:


- [Phillips #0 Screwdriver](#) (1)



### PARTS:


- [Replacement Power Switch](#) (1)

## Step 1 — Power Button Assembly

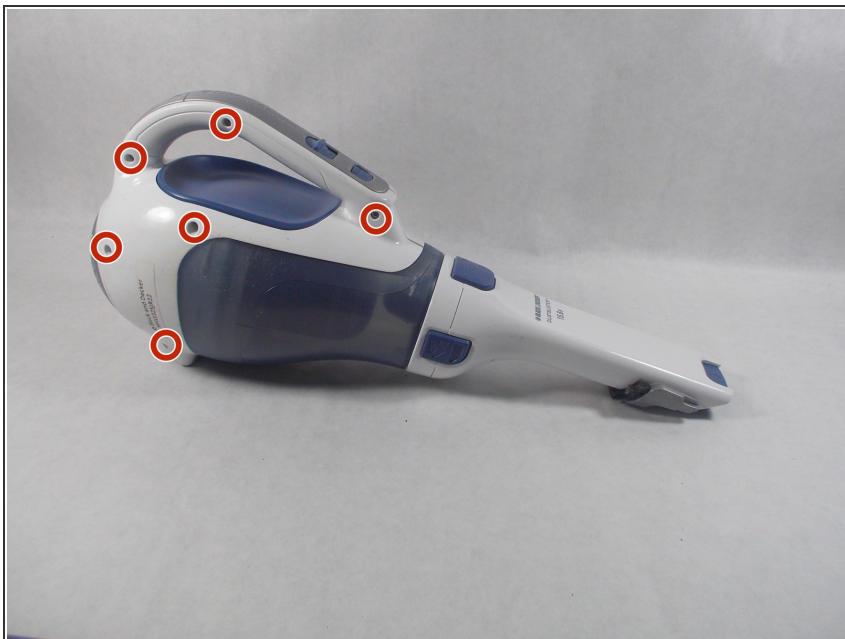

- Remove the six exterior 2mm Phillips#0 screws holding the two halves of the outer shell together.

## Step 2

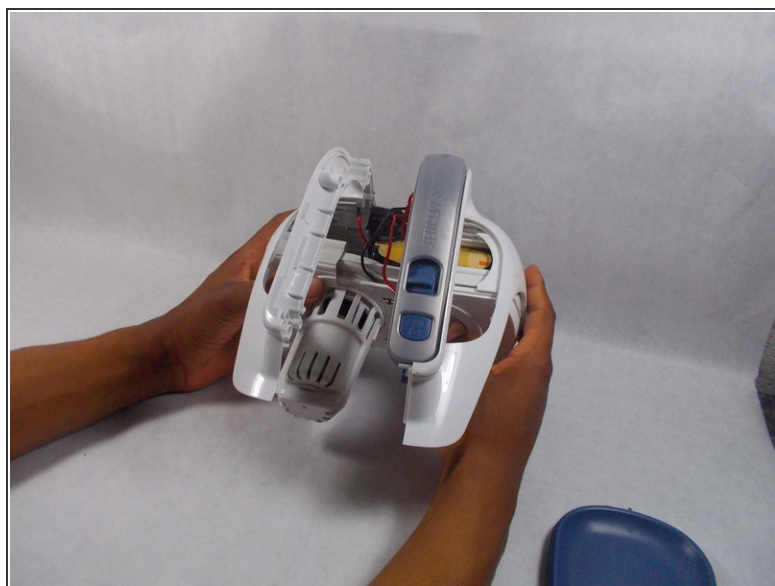


- Separate the two halves by pulling them apart.
- Once the assembly is open, locate the switch assembly inside the handle.




## Step 3




- Remove the grey handle by lifting it towards yourself.

 Be cognizant of the compressed spring located in this assembly to prevent it from ejecting.


## Step 4

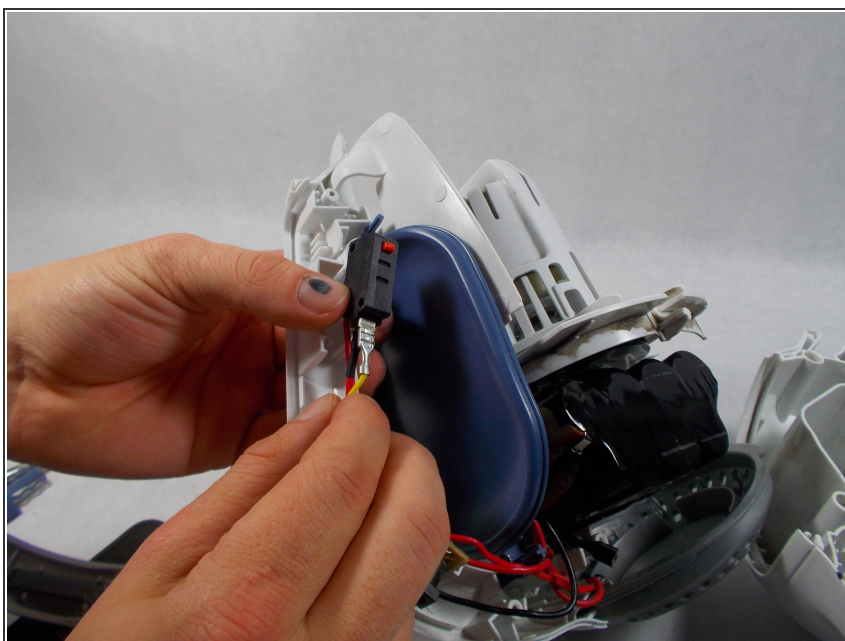

- Un-clip all three wire connectors attached to the assembly.

 Note which wire connects to each tab to avoid confusion later.

## Step 5

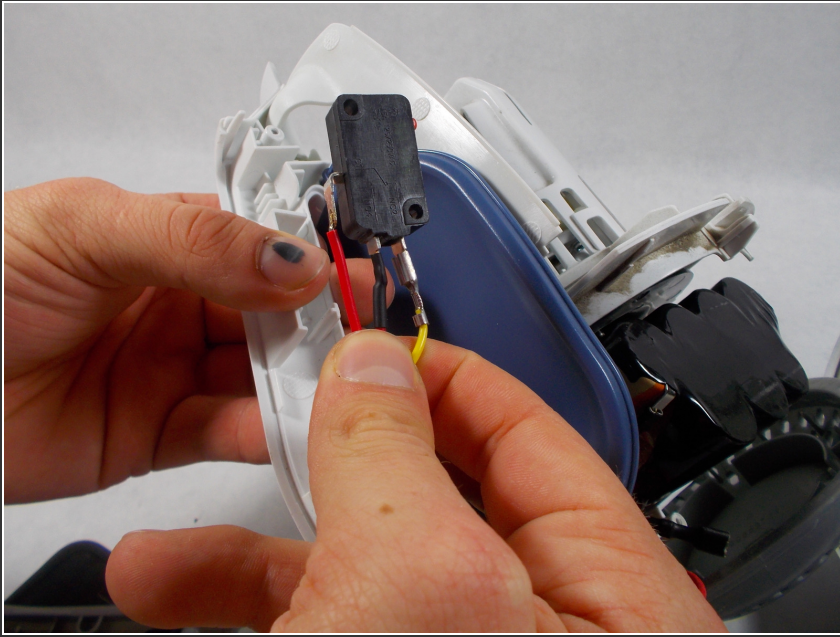

- Connect the new power button assembly to the appropriate wires.
- Slide the new power button assembly into position.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 09:14:57 AM.